

Russell Taylors

E-WARRANTY



SCAN HERE

www.russelltaylors.co.uk

USER MANUAL

TABLE BLENDER TB3



Safety Instructions

- Before using this appliance, read all instructions carefully. Retain this manual for future reference.
- Before connecting the appliance for the first time, check that the voltage indicated on the rating label corresponds to the mains voltage in your home.
- To prevent electrical hazards, do not immerse any part of the appliance or cord in water or any other liquid.
- Children must be supervised when near the appliance.
- Always use the appliance on a dry and level surface.
- When not in use and before cleaning, unplug the appliance from the power socket.
- If the appliance is damaged or malfunctions in any way, do not use it. Return the appliance to an authorized service technician for repair, as special tools may be required.
- Regularly check the power cord to ensure it is not damaged. If any signs of damage are found, return the appliance to an authorized service technician.
- Keep this appliance away from hot gas, electric burners, heated ovens, and other heat sources.
- Do not use this appliance outdoors.
- This appliance is for household use only. Do not use it for commercial purposes.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning the use of this appliance in a safe and responsible way. Cleaning and user maintenance

should not be made by children. Keep the appliance and its cord of reach of children.

- Children must be supervised while using this appliance and not play with the appliance.
- Incorrect operation or improper handling may lead to appliance malfunction and injury to the user.
- Do not use attachments other than those supplied with the appliance.

Product Description

The blender is designed for the following applications:

- Mashing fruits and vegetables
- Making smoothies, shakes, and juices
- Preparing dressings, dips, and sauces
- Making cold soups

1. Blender Base
2. Speed Control
3. Blade
4. Blender Jug
5. Lid
6. Grinder



Warning!

The device is suitable for mixing cold and lukewarm ingredients (maximum 55°C). Do not use the device for mixing hot liquids or solids. Hot liquids and solids may cause the jug to break or the lid to come off suddenly due to steam pressure. Keep the lid firmly pressed down when mixing lukewarm liquids to prevent leakage.

How To Use The Blender

- Fit the blender jug onto the blender base with the handle positioned on the right side. The jug will lock automatically.
- Pour the liquid ingredients into the blender jug. The jug has a maximum capacity of 1500 ml. To avoid foaming or spilling when processing foamable or thin liquids such as milk, do not fill the jug beyond the 1250 ml mark.
- Place the large lid on top and lock it by pressing down firmly. To add ingredients during operation, remove the small center cap by turning it clockwise and lifting it off. Do not place any objects into the blender jug while the appliance is operating.
- Insert the plug into the power supply and use the speed selector to choose the desired speed.
- Caution: Do not operate the blender when the jug is empty. Do not fill it with dry ingredients only, such as nuts or almonds.
- After use, switch off the blender and unplug it from the power supply. Wait until the motor comes to a complete stop before removing the blender jug. To remove the jug, simply lift it off the blender base.
- Always wait until the motor and blade have come to a complete stop before removing the lid.

Speed Settings

P – Pulse Function: Operates at high speed. To use this setting, hold the speed control in the “P” position.

0 – Switches off the appliance.

1 – Low speed.

2 – High speed.

Short-Term Operation

The appliance is designed to process average household quantities of ingredients. It can operate continuously for a maximum of 1 minute, after which the blender must cool down for 2 minutes.

Safety Switch

Before removing the blender jug, ensure that the Speed Control is in the [0] position.

This also applies when fitting the blender jug onto the blender base. If the Speed Control is not in the [0] position, the motor may start immediately.

General Care And Cleaning

- Always unplug the appliance from the power supply before cleaning.
- To avoid the risk of electric shock, do not clean the blender base or power cord with water, and do not immerse them in water. Wipe the blender base with a slightly damp, lint-free cloth.
- Do not use abrasive cleaners, harsh cleaning solutions, or hard brushes.
- For cleaning after use, fill the blender jug with approximately 1250 ml of clean water and a mild detergent. Run the appliance briefly as described in the operating instructions. Then rinse the blender jug and lid with fresh water. Dry all parts thoroughly afterward.