

Russell Taylors

E-WARRANTY



SCAN HERE

USER MANUAL

VACUUM CLEANER V3S

www.russelltaylors.co.uk



Safety Instructions

Warning : Basic safety precautions should always be observed when using an electrical appliance, including the following to reduce the risk of fire, electrical shock or injury.

- Store the vacuum in a dry place out of reach of children.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of this appliance by a person responsible to their safety.
- Children must be supervised to ensure that they do not play with the appliance.
- Use only the attachments provided in the packaging. Any misuse or use of any accessory or attachment that was not provided by Russell Taylors may present a risk of personal injury.
- Keep the appliance and accessories away from hot surfaces.
- Do not block the appliance openings or hinder air flow. Keep the openings free of any objects including dust, lint, clothing and fingers.

Electrical Safety

- Only use the battery and charger supplied in the original packaging, The appliance is only to be used with the power supply unit provided in the packaging.
- Do not modify the charger.
- The charger has been designed for a specific voltage. Always check the voltage is same as what is stated on the rating plate.
- Before using, check if the charger cord has any signs of damage.
- Do not abuse the charger cord.
- Do not wrap the cord around the charger when storing.
- Keep the charger cord away from hot surfaces and sharp edges.


Battery Safety

- This appliance includes Li-ion batteries. Do not expose it to high temperature or it may explode.
- Lithium-ion batteries perform best when they are kept at a moderate state of charge and are not allowed to discharge (Battery level reaches 0%). To increase the lifespan of the battery pack, do not allow the battery to reach 0% and recharge the battery regularly.
- The batteries are not replaceable. If you have a defective battery pack, please contact the Russell Taylors service team at malaysia@russelltaylors.co.uk

Product Warranty

- This appliance has been designed for domestic dry vacuum cleaning only. Any evidence of commercial use will result in void of warranty.
- The vacuum cleaner is backed by a 2-year manufacturing warranty (The battery pack is covered by a 6 month warranty).


Structure & Accessories

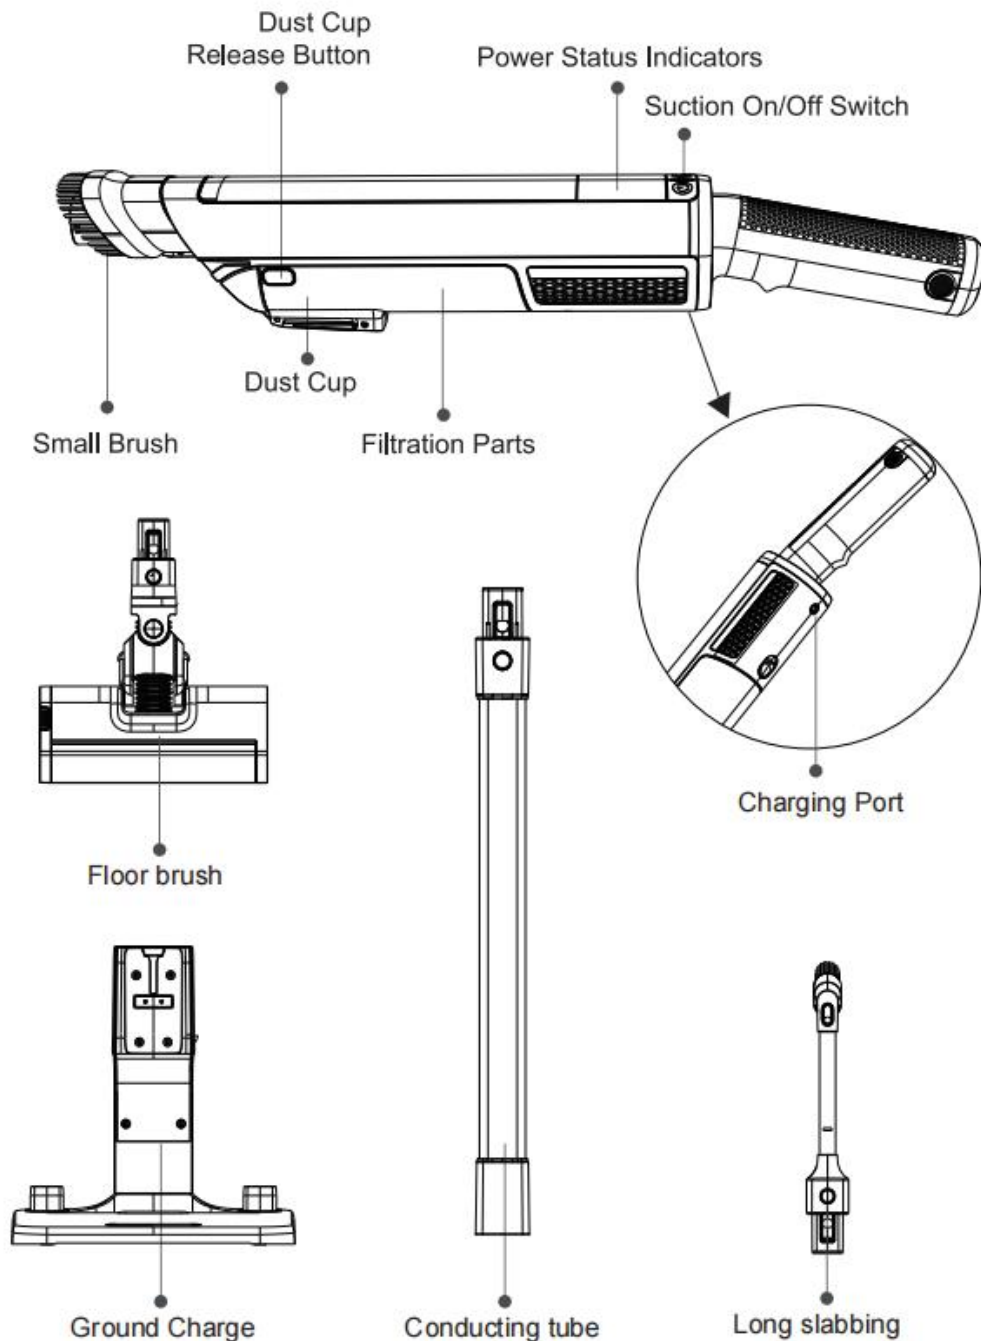




Charging Method

1. If you have purchased the charging stand, connect the adapter to the stand and place the vacuum cleaner on to the docking station to begin charging.

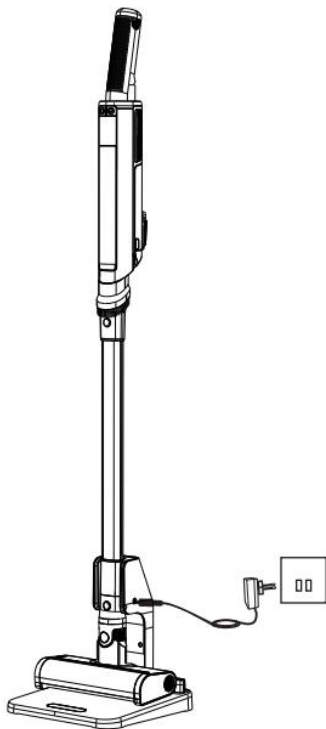


2. Alternatively, connect the charging adapter directly into the charging port of the vacuum cleaner.

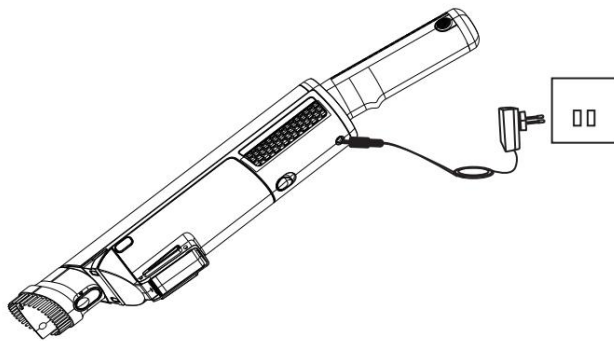


Assembly & Disassembly

1. Once the vacuum is switched on, you may start cleaning the litter around your house or rooms.

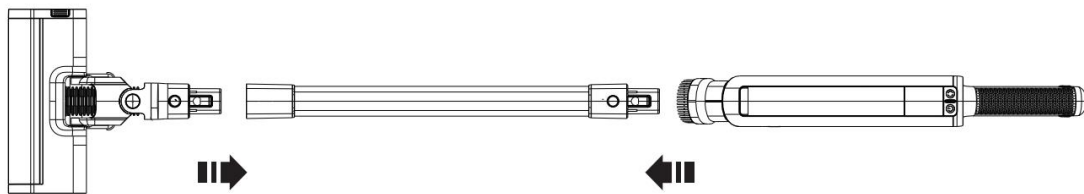

2. Select the appropriate tool for cleaning. If you wish to use the flat nozzle, simply connect the nozzle directly to the vacuum cleaner. When using the small brush, simply push the button and pull it outward.

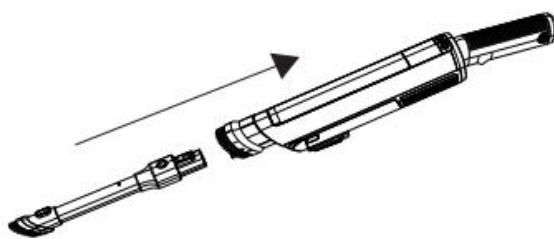


a.Flat Nozzle



b.Small Brush


3. To remove the dust cup from the body, press on the dust cup release button and remove the dust cup as shown below :

fig.A

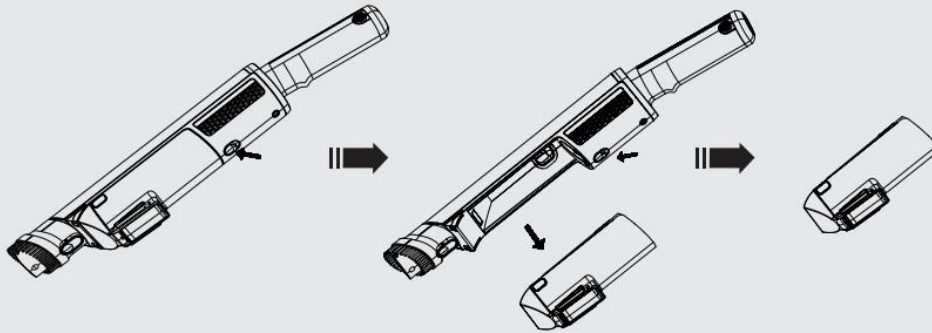

4. Remove the battery pack from the machine. Press the battery pack release button and remove the battery pack in the direction indicated below :

fig.A

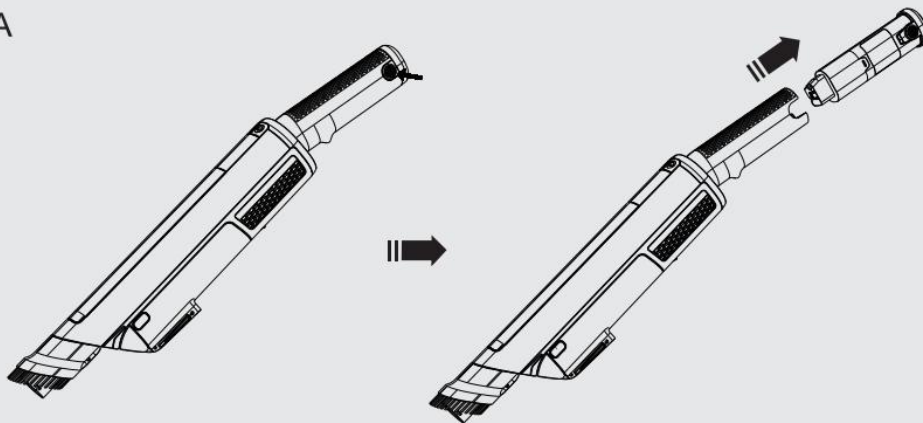

Cleaning & Maintenance

1. Without removing the dust cup, press the dust cup release button and dump the rubbish into the dustbin. When the dust cup is full, remove the dust cup container and the filter holder from the dust cup.

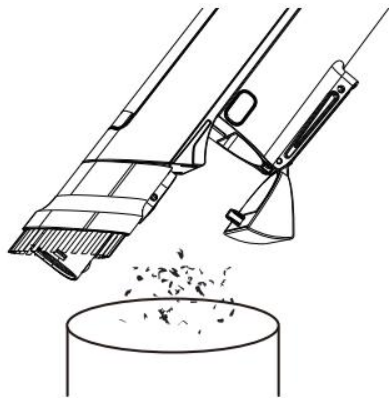


fig.A

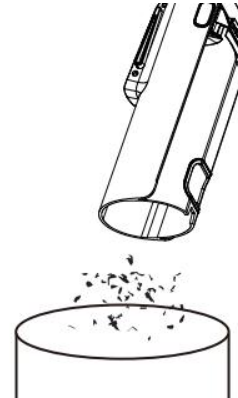


fig.B

2. You can open the dust cup by rotating in the direction of the arrow and remove the filter. Remove the HEPA filter in the direction shown below.

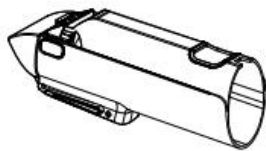


fig.A



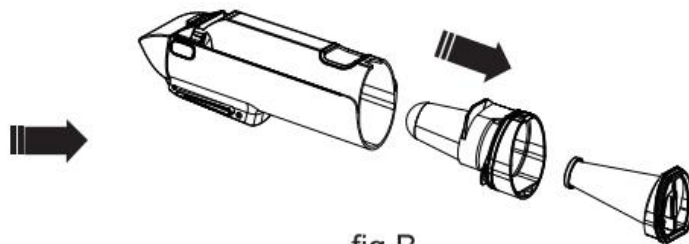


fig.B


3. You can use water to clean the dust cup and HEPA filter. Remember to dry it completely before placing it back into the dust cup to avoid damage and molding.

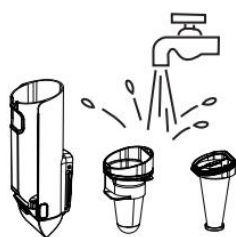

Cleaning

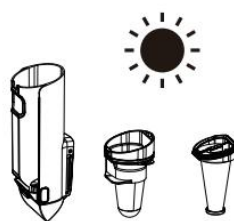

Drying Water

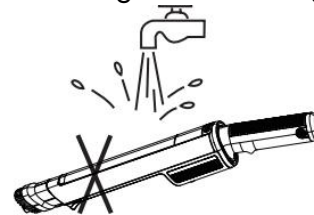

! Do not wash the motor housing.

Troubleshooting

Problem	Cause	Solution
Low Suction	1. Low battery power. 2. Vacuum left idle for too long resulting in power loss.	● Use again after a full charge. ● If the product is not used or charged for more than 3 months, it needs to be charged to avoid damage to the battery.
	1. Accessories are not installed properly. 2. Dust cup is full. 3. Air filter is blocked.	● Check the dust cup and accessories. ● Empty the dust cup. ● Clean the filter.
Unable to charge/charges slowly	1. Not using the original charger. 2. Adapter input less than 5V/3A	● Use the original adapter provided.
Sudden Shutdown	The vacuum has overheated resulting in an auto shutdown.	● Let it rest for 10 minutes before using again.
Abnormal noise during use	Filter is not installed properly	● Turn off the vacuum, clear the dustbin and reinstall the filter.