

Russell Taylors




SCAN HERE

www.russelltaylors.co.uk

DUST MITE VACUUM CLEANER

 VM35

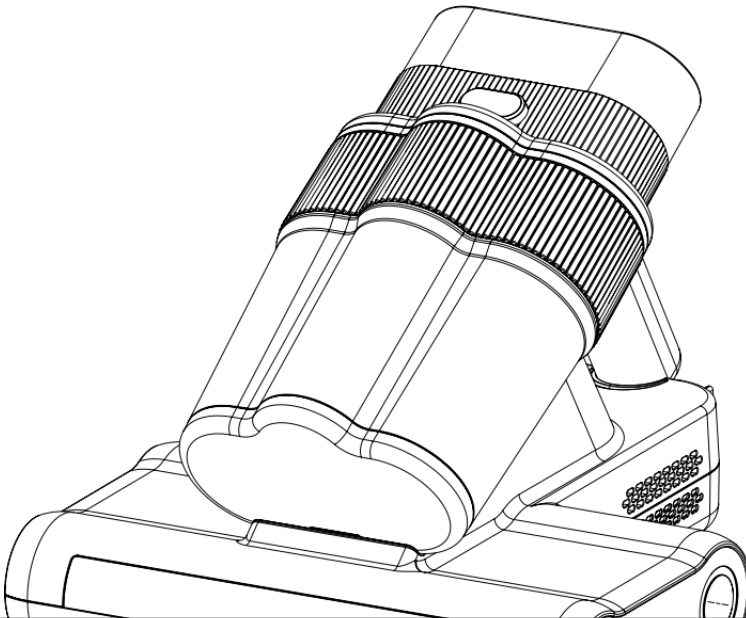

This product is covered by a 1-year warranty against manufacturing defects. For all warranty claims, please email hello.th@russelltaylors.com and include a copy of your invoice or order ID number as proof of purchase. You are entitled to one (1) warranty claim during the warranty period.

IMPORTANT SAFEGUARDS

 
This product is not suitable for use by people with physical, sensory or mental disabilities (including children) or people who lack experience or knowledge, unless they are supervised by someone

responsible for their safety or given instructions on the use of the machine in advance. Please be sure to supervise children to ensure that they do not use the machine as a toy.

- keep this product out of reach of children under eight years old.
- Do not use the vacuum cleaner if it has fallen and is obviously damaged or malfunctioning.
- Avoid running the vacuum cleaner for a long time with the suction port blocked to avoid damaging the vacuum cleaner.
- Before use check whether the power supply voltage is consistent with the parameters marked on the bottom nameplate.
- Do not use the machine outdoors or on wet surfaces. It is for indoor use only.
- Before use make sure that the dust cup is correctly installed on the machine. If it is not installed correctly it may cause damage to the machine or affect the working effect. Please dry the dust cup before installing it.
- Do not block the air inlet and outlet of the machine with objects. If the air inlet is blocked please do not run the machine.
- when moving the machine to another place, please turn off the power first; unplug the machine when not in use or before maintenance. when unplugging, do not pull the wire, but pinch the plug to unplug it.
- Do not use or store the machine near heating devices such as stoves, flammable gases, and flammable materials.
- Do not run multiple electrical appliances on one power strip at the same time.
- If the metal head of the plug is stained with dust or water, please clean it with a dry towel. Do not connect the power supply or run the machine when the power plug is wet.
- when using, do not move or lift the machine with the power cord, do not press the power cord under the door to close the door, or place the power cord on sharp objects or in a corner, and do not press the power cord to run the machine.





- Do not use the machine to suck burning, smoking or sharp- edged objects, such as cigarettes, knives, etc., and do not suck water and other liquids.
- when plugging or unplugging the power plug, do not touch the metal part of the plug with your fingers, and do not touch the power plug and power switch with wet hands.
- Before cleaning the machine each time, make sure that the power plug is unplugged, and do clean the machine only with clear water or pure alcohol.
- when the following situations occur, please turn of the machine immediately and contact our company's after-sales service hotline:
-If there is abnormal noise, odor or smoke.
-when the machine should work but does not work.
- uv-C ultraviolet rays can harm human skin and eyes. Do not expose human body, plants or animals directly (for a long time). If you feel discomfort after prolonged exposure, please seek medical attention immediately.
- Never look directly at the light tube at any time to avoid injury.
- If the power cord is damaged, it must be replaced by professionals from the manufacturer, its mainte- nance department or similar departments to avoid danger.

PRODUCT COMPONENTS

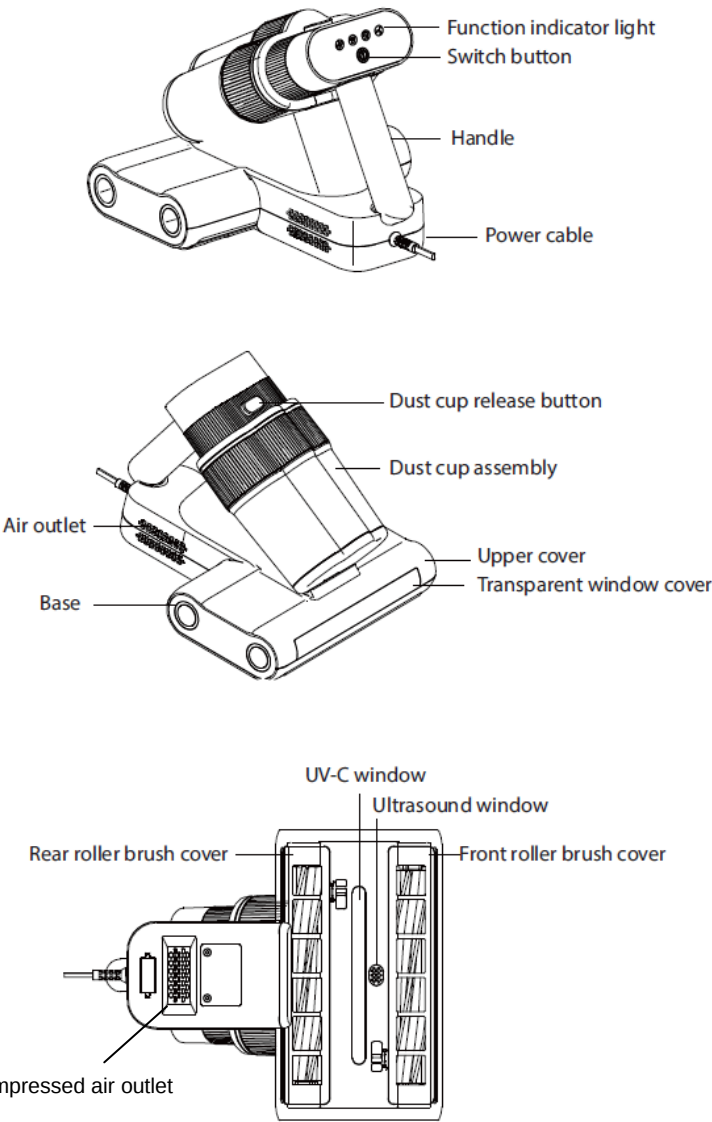

OPERATING INSTRUCTIONS

    1. Plug the power cord into the socket to connect electricity power.
2. Press the switch button on the control panel to turn on the machine. The default setting is low speed
3. Press the switch button a second time and the main motor will work with full power.
4. Press the switch button a third time to turn of the machine.
 - When the machine is turned on, the dust removal indicator light is on.
 - When the machine comes in contact with a surface, the roller brush, Uv-C light, and ultrasonic waves will simultaneously be activated.
 - The 4 white indicator lights on the control panel are all activated. If the machine is lifted from the surface, the roller brush, Uv-C light and ultrasonic waves stop working and the machine switches into standby mode.
 - The dust removal light will remain on throughout
 - After use, switch of the power and unplug the power cord from the socket.

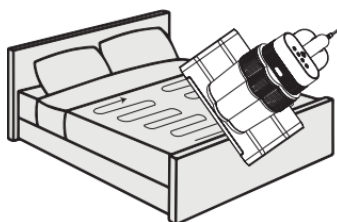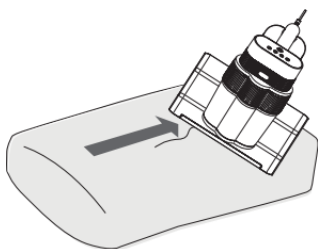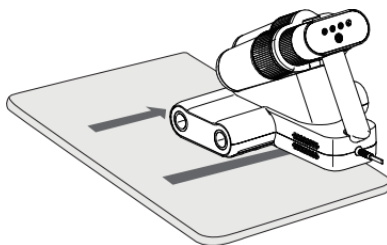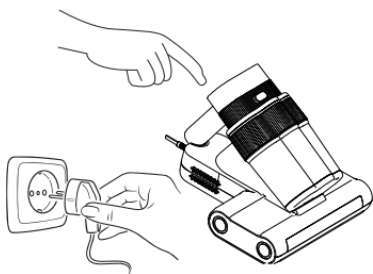


TROUBLESHOOTING

Issue	possible causes	Method of action
The vacuum cleaner does not work at all	1. The power plug is not firmly inserted in the socket. 2. There is no electricity in the socket. 3. The vacuum cleaner switch is not turned on.	1. Reinsert the plug. 2. Check the circuit breaker. 3. press the power switch of the machine.
Reduced suction performance	1. The dust bin is too full. 2. There is too much dust on the surface of the sponge filter.	1. Clean the dust bin in time. 2. Clean the filter.
The display is not working	Circuit board failure	Repair or replacement
The UV-C lamp and ultrasonic function not working	1. The distance between the distance sensor switch and the object being cleaned is larger than 1cm, and it is not in contact with the surface. 2. The UV-C lamp is damaged. 3. some internal parts are damaged.	1. The product only works when it is in direct contact with the surface to be cleaned. 2 + 3. Repair or replacement
The roller-brush is not working	1. Hair is entangled and the brush is stuck. 2. The control circuit board is damaged.	1. Take out the roller brush to remove hairs and disentangle 2. Repair or replacement

CLEANING & MAINTENANCE

 - Although ultraviolet rays have strong penetrating power, dust and stains on the lamp tube will directly affect its penetrating power. Quartz lamp tubes should be wiped and cleaned regularly to preserve maximum efficiency
- Be careful not to touch the quartz glass of the lamp tube with your fingers, because stains will affect the sterilization lamp tube.
- Clean the high-efficiency filter regularly (or purchase replacement filters)
- Filters are washable – please make sure they are completely dry before reuse
- If the lamp tube fails, please send it for repair, do not disassemble it by yourself

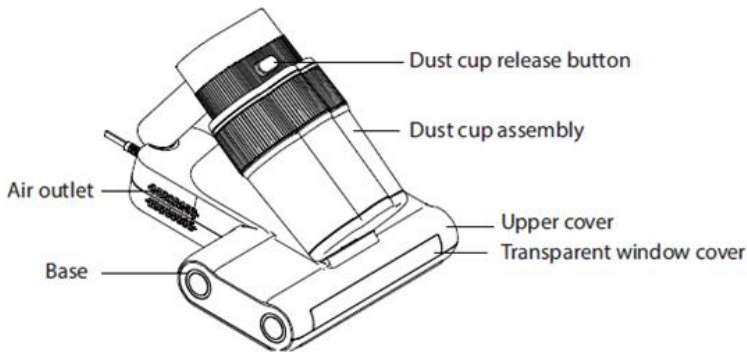

Cleaning the Machine:

- Turn off the machine and unplug the power plug. Press the dust cup release button, lift up and remove the dust cup.
- Gently pull dust cup cover upwards to release lid
- Rotate filter cartridge counter clockwise to release filter
- The filter can be rinsed with water – It is recommended to dry the filter under direct sunlight to prevent odors
- All maintenance and repair work must be done after the vacuum cleaner is unplugged.
- Clean the dust canister frequently to avoid malfunction of the vacuum cleaner.
- The surface of the vacuum cleaner cannot be scrubbed with gasoline or oily substances. It should be scrubbed with a soft cloth or neutral detergent. When scrubbing, the cloth must be wrung out
- Water cannot seep into the electrical components of the vacuum cleaner.

- Unplug the power cord, separate the power cord from the machine and store it well.
- Store in a cool, dry area
- Do not stack heavy objects on top of the machine.

PRODUCT STORAGE

- When storing the machine, roll up the power cord in a circular manner
- Notice: when cleaning the machine, please turn off the power and unplug it
- Do not expose the machine outdoors and/or humid environments, and do not put any accessories into the dishwasher for cleaning.
- The vacuum cleaner shell and filter can be cleaned with a wet towel, but when the machine is running, be careful to prevent liquid substances from penetrating into the machine.
- Do not use strong cleaning agents (such as detergents and diluents) to clean the machine in order to prevent corrosion of the outer surface of the machine.
- Ensure that the body and accessories are completely dry before connecting to the power supply.

TECHNICAL DATA & SPECIFICATIONS

Voltage: 220–240V

Frequency: 50–60Hz

Power: 400–500W

UVC Light Sterilization: 270–280nm

Ultrasound mite removal > 20 kHz

DISPOSAL



Environmental Protection

Waste electrical production should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

Russell Taylors