Russell Taylors

E-WARRANTY

SCAN HERE

www.russelltaylors.co.uk


USER MANUAL


FOOD CHOPPER FC2




Instructions for Use


1. Remove the main unit and accessories. Clean the upper cover, mincing cup, main mincing blade, auxiliary blade, and protective cover thoroughly.
2. Place the anti-slip mat on a stable surface. Place the mincing cup on top and keep it away from children.
3. Insert the auxiliary blade into the main blade shaft and twist counterclockwise to secure.

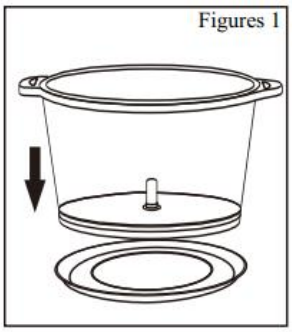


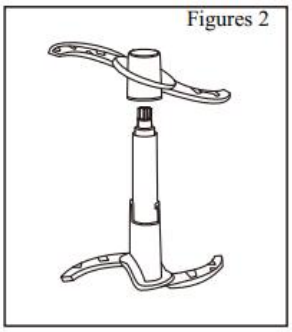


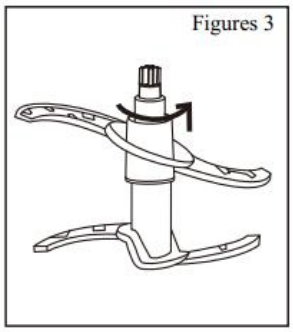

4. Remove the protective blade cover and insert the blade assembly into the shaft in the mincing cup.
5. Add ingredients into the cup, then secure the upper cover in place.

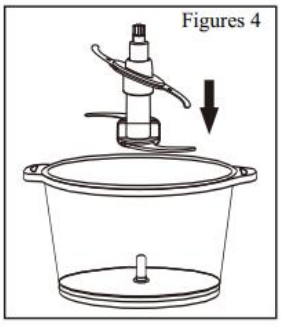


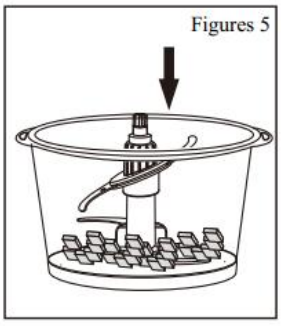

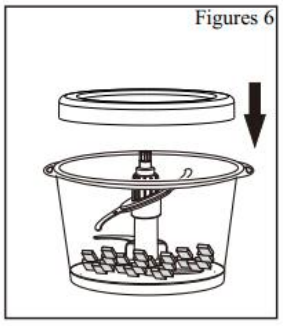

6. Place the main unit onto the top cover. Ensure the central shaft aligns with the motor base for proper operation.

7. Connect the unit to a power supply. Press either button “I” (low speed) or “II” (high speed) to operate. Do not run continuously for more than 30 seconds. Releasing the button will stop the motor.

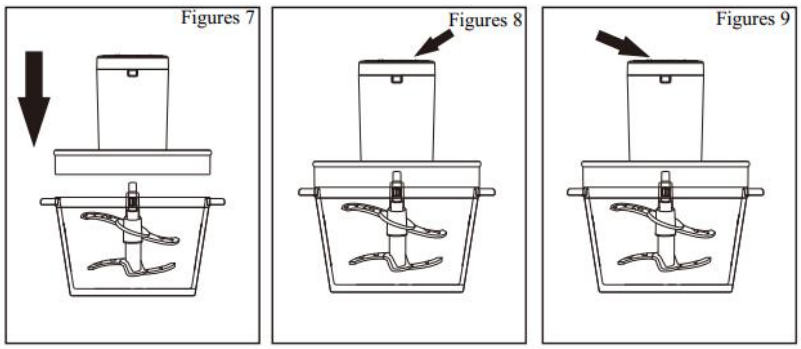


8. After use, unplug the unit. Wait until the blades stop spinning before disassembling. Use a spoon or chopsticks to remove the ingredients.
9. If ingredients stick to the sides, disconnect the power, open the lid, and scrape the sides before restarting.
10. Do not use this appliance to grind very hard or dry ingredients such as soybeans, rice, or gelatin, nor should it be used for liquids.
11. If the grinder shakes during operation, turn off the unit, redistribute the ingredients evenly, and restart.
12. If the ingredients are not ground satisfactorily after 30 seconds, allow the motor to cool for 2 minutes before continuing.
13. Note: This grinder is not suitable for making dry powder. Operating cycle: 30 seconds on, followed by 2 minutes off. After 2 continuous cycles, let the motor cool down for 15–20 minutes before reuse.

Recommended Food Preparation

• **Meat**: Remove tendons, bones, and skin. Cut into 1–2 cm cubes. Fill only up to half the cup volume.

• **Vegetables & Fruits**: Use both blades. Cut into thin strips (1–2 cm wide) or small blocks (2–3 cm). Do not exceed four-fifths of the cup capacity. Ensure the lid is securely in place before starting.

Product Structure

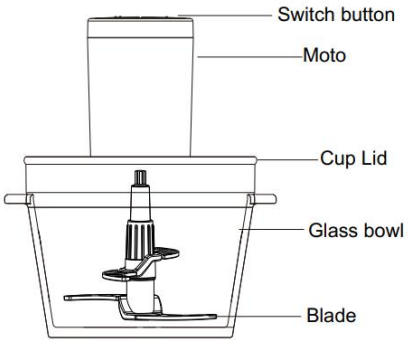

Precautions

1. Ensure the voltage matches the product label.
2. If the plug or cord is damaged, do not use the product. Contact after-sales support.
3. Check for cracks or improper assembly before use.
4. If the power cord is damaged, have it replaced by authorized service personnel.
5. Always unplug the unit before cleaning.
6. Keep the product out of children's reach unless supervised.
7. Do not operate with wet hands.
8. Avoid touching moving parts or blades while the appliance is connected.
9. Use only the provided base with this appliance.
10. The blades are sharp. Handle with care during cleaning.
11. Always switch off before moving the unit.
12. Do not exceed the recommended food quantity. Do not operate empty.
13. Never touch the blades while they are rotating.
14. If the motor overheats, allow it to cool for 20–30 minutes before reuse.
15. Wait for the blades to stop completely before disassembling.
16. This appliance is not intended for grinding dry powder or processing wet/frozen items.
17. Never immerse the motor unit in water.
18. Avoid using harsh or corrosive cleaning agents.
19. Do not microwave or freeze any component.
20. Do not wash any parts in a dishwasher.

21. All food-contact parts are made from food-grade materials.
22. The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of this appliance by a person responsible to their safety.
23. This appliance is for household use only.

Cleaning and Maintenance

- Clean all parts promptly after use.
- Do not immerse the main unit in water. Wipe clean with a soft cloth.
- Use a mild detergent if necessary, but avoid soaking any parts.
- Dry all parts completely before reassembly.
- Do not use hot water above 40°C or apply high-heat sterilization.

Troubleshooting Guide

Problem	Possible Cause	Solution
Unit not working	Improper assembly	Reinstall all parts correctly
Burning smell	First-time use of the motor	Normal; if persistent, contact service center
Weak blade rotation	Overloaded or under-voltage	Reduce load or check voltage
Sudden power-off	Motor overheated	Let it cool for 20–30 minutes
Blade stuck	Food blocking movement	Cut food into smaller pieces
Excessive noise/vibration	Unstable placement or incorrect assembly	Stabilize unit and redistribute ingredients